



Product 96879

WARNING: Load equalizers heat up extremely hot. The load equalizer should be mounted to a metal surface, with no contact to plastic or painted parts or surfaces.

1129, 1156, 7440 and 3156 single filament installation drawing:

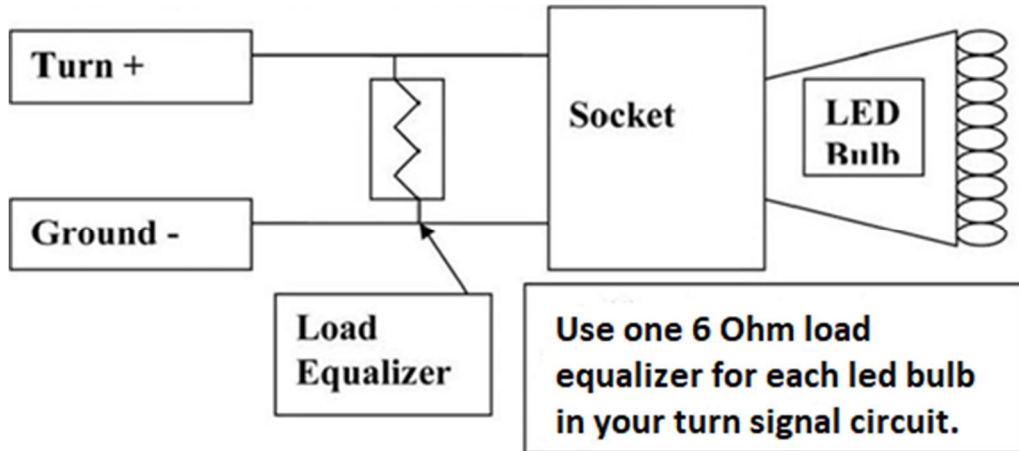

1154, 1157, 1158, 7443 and 3157 dual filament installation drawing:

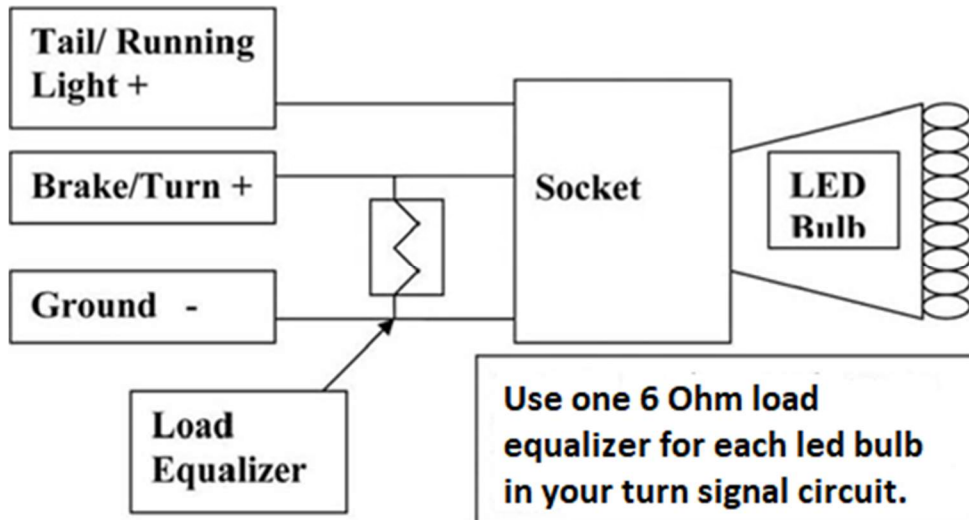

Please use the supplied insulation displacement crimps to connect the load equalizer in parallel with your led bulb without cutting your existing wires.

To test the installation the load equalizer will get warm to hot when the turn signal circuit is flashing on the same side as the load equalizer is installed.

LEDLight.com P.O. Box 82626 Phoenix, AZ 85071 Toll Free 1 (877) 283-5060

Local 1 (602) 997-0366 Fax 1 (602) 861-4088 sales@ledlight.com