



## Product 54738

WARNING: Load equalizers heat up extremely hot. The load equalizer should be mounted to a metal surface, with no contact to plastic or painted parts or surfaces.

Single filament for driver and passenger headlight installation drawing:

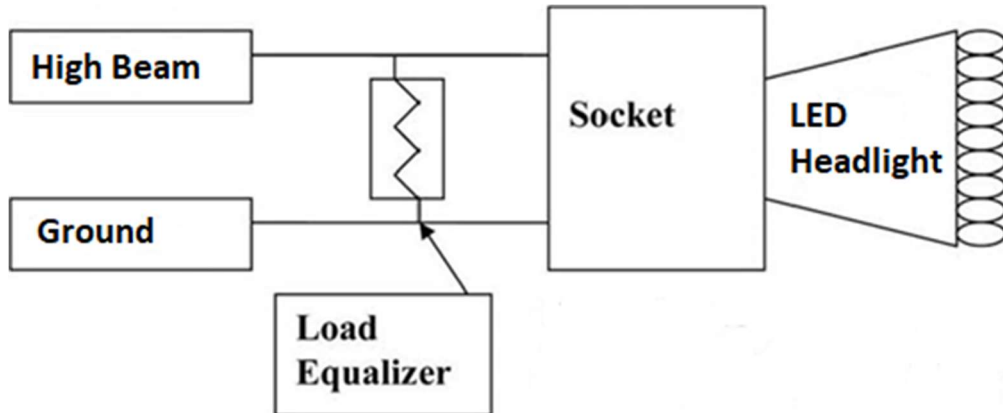

Dual filament for driver and passenger headlight installation drawing:

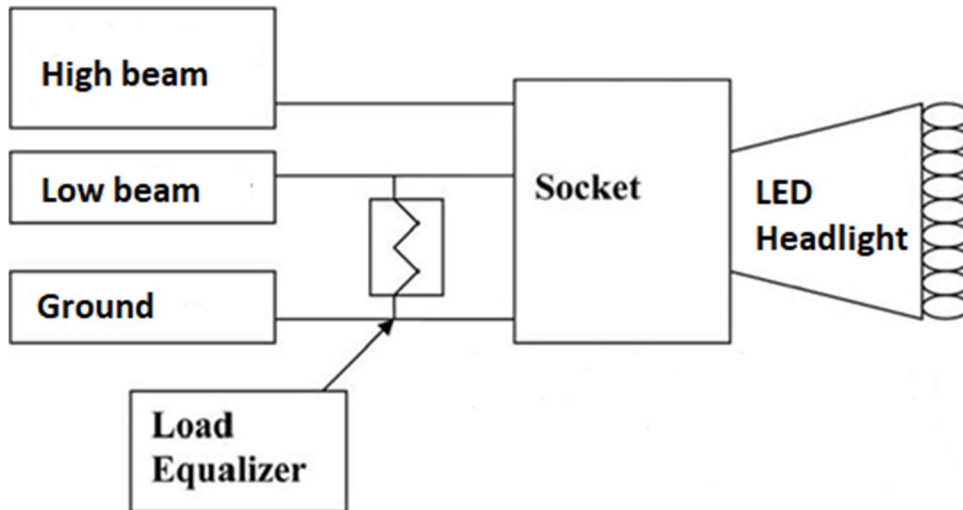

Please use the supplied insulation displacement crimps to connect the load equalizer in parallel with your led headlight without cutting your existing wires.

To test installation the load equalizer will get warm to hot when the headlight is turned on low beam.

LEDLight.com P.O. Box 82626 Phoenix, AZ 85071 Toll Free | (877) 283-5060  
Local | (602) 997-0366 Fax 1 (602) 861-4088 sales@ledlight.com