





WARNING: Load equalizers heat up extremely hot. The LED Light Load equalizer must be mounted to a metal surface, with no contact to plastic or painted parts or surfaces.

1156, 7440 and 3156 Installation Drawing:

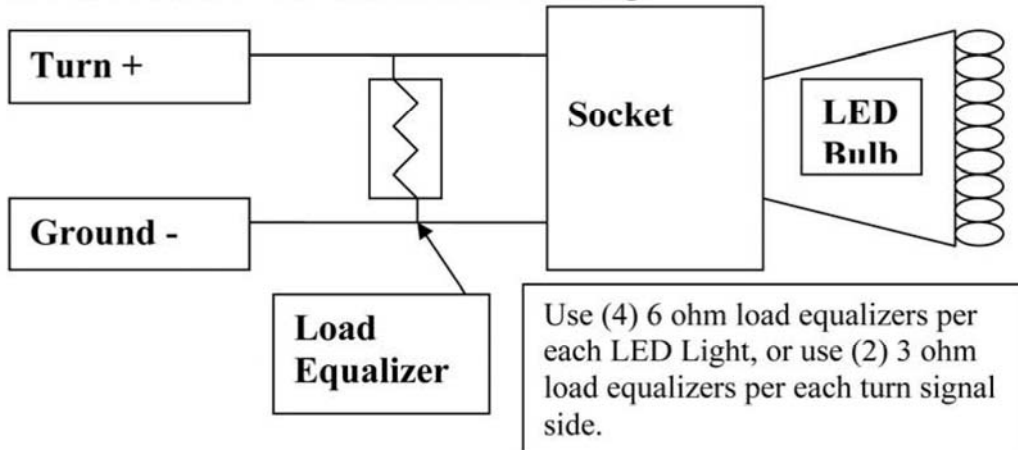

1157, 7443 and 3157 Installation Drawing:

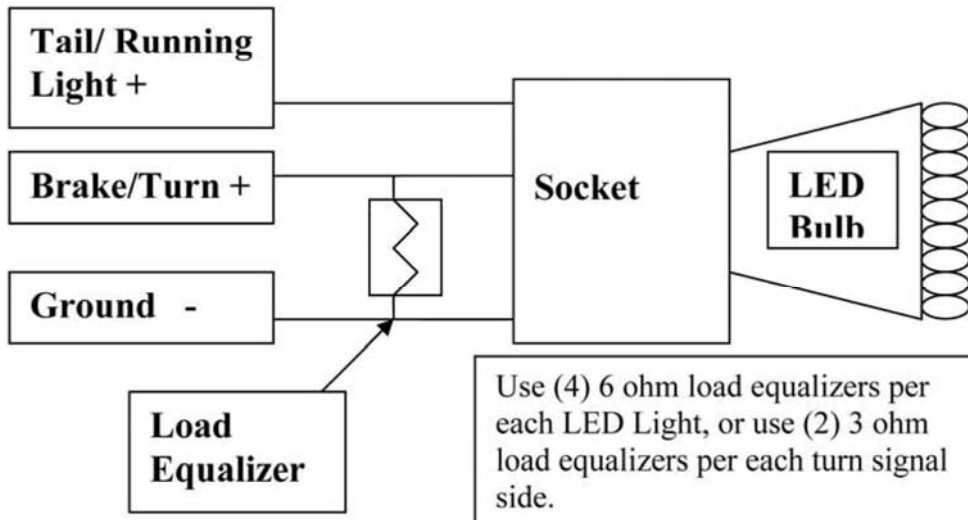

Please use the supplied connectors to connect the LED Light Load Equalizer to the vehicle wiring.

LEDLight.com, LLC

12215 East Chandler Heights Road, Chandler, AZ 85249


Toll Free 1 (877) 283-5060 Local 1 (602) 997-0366 Fax 1 (602) 861-4088

6 = 6 Ohm

3 = 3 Ohm

1. Replace LEDs front or rear.
2. Replace LEDs left or right side.
3. Replace all LEDs front/rear and left/right.

1.

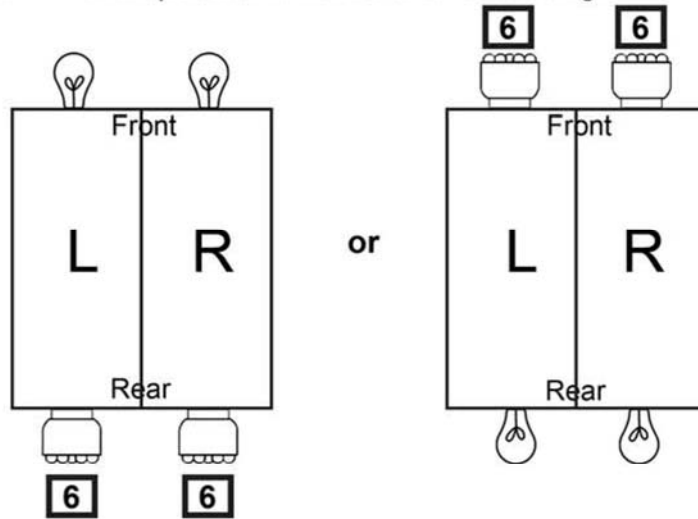

2.

