

LED Wall Washer

INSTRUCTION OF LED WALL WASHER/ST-LHB01

This product is mainly used for decoration and highlight in building frame, garden, etc. It can work in independent mode and DMX mode, which can generate various color changing effects, such as flashing, fading, steady, seven color jumping synchronously etc. DMX256 class gray degree dimmer, DMX programmable (thousands of effects available if many lights connected together).


A. Structure and Specification (as the right picture):

Size: L343*W152*H214mm

Material of Shell: Aluminum alloy

Weight: 3.9kgs±5%

Rotary angle: 180°

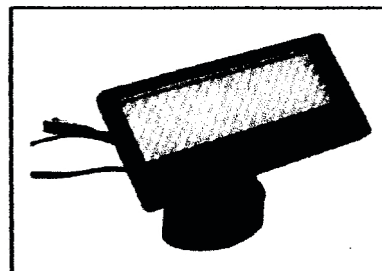


B. Technical Parameters

Input Voltage: 100V~256V AC

Operating Voltage: 12V DC/24V DC

Protection Rating: IP65

Operating Temperature: -40°C~60°C

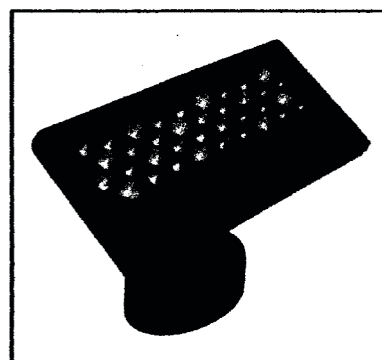

Model No.	LED Quantity	Color	Current	Power Consumption	Beam Angel	Project distance
LWW-1-180	180LED	R-60, G-60, B-60	0.06A(Max.)	15Watts	45°	15M
LWW-1-360	360LED	R-120, G-120, B-120	0.11A(Max.)	25Watts	45°	20M
LWW-1-36P	36 Power LED	R-12, G-12, B-12	0.22A(Max.)	48Watts	25°	20M

C. Function

Seven color jumping, seven color fading, seven color flashing, master/slave mode

D. Control mode

Independent mode: choose the effects that you need by button on the back of lighting; auto online


DMX mode: International standard DMX512 signal control (3XLR)

E. Instruction of buttons

E-1. Set up DMX address

When the digital tube is not flashing, press "A" key, one digital begin to flash, and press "A" key once again, digital tube moves backward, you can start to edit the new address; Press "B" key, the corresponding flash digital tube increase one bit (the values between 0 to 9);

*** the range of valid address:001~512




LED Wall Washer

E-2. Adjustment and choice of function for independent mode

After you press "A" key four times (the first three times is the setup of the address of DMX, for the independent mode to adjust or choose function; the digital tube shows Pxy, they correspond with three digital tubes respectively. You can press "B" key, the flashing digital tube adds eleven (the value between 0 to 9). "X" corresponds with the choice of function (the value between 1 to A), "Y" corresponded with the value of speed and gray degree for some function (the value between 1 to 9)

The form about function and parameter:



Y value	X value
1-9 class gray degree	1-single red
1-9 class gray degree	2-single green
1-9 class gray degree	3-single blue
1-9 class gray degree	4-yellow
1-9 class gray degree	5-purple
1-9 class gray degree	6-cyan
1-9 class gray degree	7-white
1-9 class speed	8-multicolor changing
1-9 class speed	9-multicolor fading
1-9 class speed	A-multicolor flashing

E-3. When you press button, please hold on about 10 second, then, you can exit the mode of adjustment function, the digital tube stop flashing and to memorize the adjusted parameters.

F. Using instruction

F-1. Independent mode, you can adjust the preset functions of lighting by button on the back of lighting;

F-2. DMX mode, DMX console to control the lighting, referring to the manual of the relevant console for attaining more information.

F-3. Master/Slave function for independent mode, please choose at random some lighting as a master to attaining auto online function, the relative operation as below: firstly, set the address of a master as 001, others are be set as a slave. For auto online mode, only one master, all effects depend on the effect of the master;

F-4. DMX address, each lighting occupies three channels, that is red, green, blue, including the value of the initial channel, For example, Address 001 occupies the channel 1,2 and 3. Address 256 occupies the channel 256,257 and 258.;

F-5. Do not plug them into power when the product is still in package;

F-6. Don't use anything to cover this lighting;

F-7. Don't use this product in close environment;

F-8. If this product appears to be damaged, do not attempt any operation, please contact your dealer.

F-9. The installation of a product must be completed before the power plug inserts. Please let technicians disassemble the lights for fixing and repairing.

G. Waterproof treatment

The signal output connector XL-3R of the last fixture (maximum 30 fixtures) of each series must be wrapped with waterproof tape(auto-adhesive, please refer to instruction for operation), thence sealed with a $\Phi 20$ thermal shrinking sleeve and blow and shrink it with a hair drier for waterproof purpose.

LED Wall Washer

Warning: Neglect on action of the above treatment will lead to failure of waterproof and proper working of the lights!!!

